

EUROPE Frequency (863-865 MHz)

CHANNEL 1	863.125MHz	CHANNEL 9	863.250MHz
CHANNEL 2	863.375MHz	CHANNEL 10	863.500MHz
CHANNEL 3	863.625MHz	CHANNEL 11	863.750MHz
CHANNEL 4	864.000MHz	CHANNEL 12	863.875MHz
CHANNEL 5	864.250MHz	CHANNEL 13	864.125MHz
CHANNEL 6	864.500MHz	CHANNEL 14	864.375MHz
CHANNEL 7	864.750MHz	CHANNEL 15	864.625MHz
CHANNEL 8	864.875MHz	CHANNEL 16	864.875MHz